

CompX® **RegulatorR**®

Instruction Manual for RegulatorR gang locking REGS-G-DR-1, -2, -3



CompX® **RegulatoR**®

Thank you for purchasing the CompX® RegulatoR®. The RegulatoR is an innovative solution for locking multiple drawers when using CompX Timberline's front mount gang locks (SYS-100, SYS-101 & SYS-104).

See application drawing B-140 by going to <http://compX.com/instructions.html>

Powered by 2-AAA batteries (included), RegulatoR operates using a 4 to 8 digit code. Operation is simple: type a valid code and press ENTER. Then just turn the lever to the locked or unlocked position.

RegulatoR is easy to install, and offers:

- Programmable user and supervisor codes
- Programmable modes of operation
- Programmable reset features

RegulatoR is intended for interior use only.

Operating Temperature: 50°F – 120°F (10°C – 48°C)

Note: It is strongly recommended that batteries be replaced on an annual basis. In the event the batteries should die, they can be replaced via the external battery compartment.

Packaged Components

- *RegulatoR Lock Assembly w/pin cam*
- *2 AAA alkaline batteries*
- *Mounting hardware*

Each lock contains 2 green stickers that are needed for resetting RegulatoR. In the event RegulatoR needs to be reset, *one* green sticker is placed on the back of the device. The remaining green sticker should be saved in a safe and secure location for future reference. (See page 9 for reset instructions.)



CompX[®] ***RegulatorR[®]***

Table of Contents

Powering Up and Battery Installation	4
Programming Introduction	5
Programming Mode	7
Changing the User Code	8
Changing the Supervisor Code	9
Single Use/Standard Mode	10
Single Use Timeout ON/OFF	11
Security Timeout ON/OFF	12
Reset User Code	13
Technician Mode	14
User Slot (03-20) Programming	16
Mounting Template	20

CompX® *Regulator*R®

Powering Up and Battery Installation

CompX® Regulator® is shipped with two AAA batteries. While Regulator® features a low battery indicator, annual battery replacement is recommended. Mixing batteries of different chemistries could damage the Regulator resulting in lock failure.

To power up Regulator®, remove the red tag. Lock is now ready for use.

A T-15 pin in head Torx® (6-lobe) will be required to remove the battery cover. (Not Included)

To change batteries:

1. Loosen the retaining screw.
2. Remove battery cover.
3. Press **CLEAR** 5 times.
4. Insert new batteries as shown in the illustration.
5. Reinstall battery cover, tighten retaining screw.



Care and Cleaning

To clean the Regulator® surface, apply non-acid based cleaner to a clean cotton cloth; do not spray cleaner directly on the Regulator®. Wipe down keypad and its respective housing surfaces of excess cleaner.




CompX® *RegulatoR*®

Programming – Introduction

CompX® RegulatoR® is easy to program and operate. Type the user code (factory default **1234**) and press **ENTER** to lock or unlock the cabinet.

The supervisor can change operating codes, modes and restore lock settings. While RegulatoR is easy to program, we highly recommend reading the complete programming instructions prior to making any changes. Remember to keep track of any programming changes.

Button locations, indicator lights and knob referenced in the programming instructions are shown below.

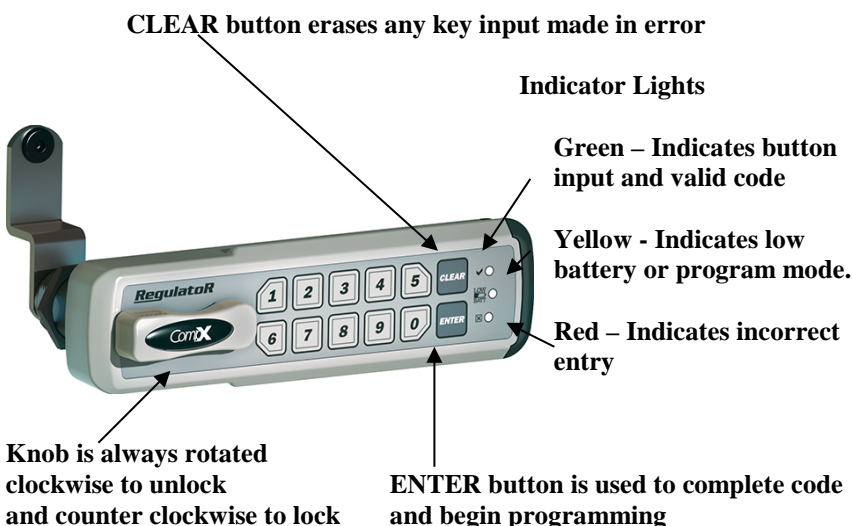

Note: RegulatoR shown above is not same mounting version as gang-lock version

CompX® *RegulatorR*®

CompX® RegulatorR® for gang lock locking is a Manual Lock version. Follow the directions below to unlock and lock the RegulatorR.



To operate the standard Manual Lock version of RegulatorR:

To **unlock**, type a valid code, press ENTER and rotate knob clockwise 180°.

To **lock**, rotate knob 180° counter clockwise.



CompX *RegulatoR*®

RegulatoR Programming Mode

To enter programming mode you must know the supervisor code. The default supervisor code is **12345**. Once in programming mode, multiple changes can be made prior to exiting programming.

There is a **10** second programming time limit between each step. If RegulatoR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Lock must be in the **locked** position prior to entering programming mode.
2. Type supervisor code and press **ENTER**.
Rotate the knob to the **unlocked** position and press and hold **ENTER** for **3** seconds (**yellow** indicator light will illuminate).
3. With the **yellow** indicator light illuminated, programming can begin.



CompX *RegulatorR*®

Changing the User Code

To change the user code, follow the steps on page 7 to enter programming mode.

The factory default user code is **1234** (user codes must be 4 to 8 digits in length.)

There is a **10** second programming time limit between each step. If RegulatorR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatorR into programming mode (see page 7).
2. Press **1** and then press **ENTER**.
3. Type the current user code and press **ENTER**.
4. Type the new user code and press **ENTER**.
5. Retype the new user code and press **ENTER**.
6. If successful, the **green** indicator light will illuminate for 1 second.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX® **RegulatoR®**

Changing the Supervisor Code

To change the supervisor code, follow the steps on page 7 to enter programming mode.

The factory default supervisor code is **12345** (supervisor codes must be 4 to 8 digits in length.)

There is a **10** second programming time limit between each step. If RegulatoR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatoR into programming mode (see page 7).
2. Press **2** and then press **ENTER**.
3. Type the current supervisor code and press **ENTER**.
4. Type the new supervisor code and press **ENTER**.
5. Retype the new supervisor code and press **ENTER**.
6. If successful, the **green** indicator light will illuminate for 1 second.

Continue programming or press **9** and then **ENTER** to exit programming.

RegulatoR® features a reset code which will restore the default supervisor code and user code. RegulatoR was shipped with reset stickers; one attached to the back of the RegulatoR and an extra sticker that should be saved in a safe and secure location for future reference.

*To restore the factory default supervisor and user code, type the Reset Code assigned to the RegulatoR and press **ENTER**.*

CompX® RegulatoR® features several modes of operation. These functions can be changed using the following instructions with a valid supervisor code.



CompX *RegulatoR*®

Programming Single Use Mode / Standard Mode

Single Use Mode allows for a revolving user code so multiple people may use the lock without having to reprogram the RegulatoR each time.

Standard Mode RegulatoR operates with a fixed code. To change the code, follow the **Changing the User Code** steps on page 8.

To change the RegulatoR to Single Use or Standard Mode, follow the steps on page 7 to enter programming mode.

There is a **10** second programming time limit between each step. If RegulatoR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatoR into programming mode (see page 7).
 - a. To turn Single Use Mode “ON”: type **51** and then press **ENTER**.
OR
 - b. To return to Standard Mode: type **50** and then press **ENTER**.
2. If successful, the **green** indicator light will illuminate for 1 second.

Note: Returning to Standard Mode will reset the factory user default code (**1234**).

Continue programming or press **9** and then **ENTER** to exit programming.



CompX **Regulator**

Programming Single Use Timeout ON / Single Use Timeout OFF

Warning: Manual Lock - Single Use Timeout ON is a feature to prevent users from occupying a shared use locker or cabinet for a prolonged period of time. Turning this feature on will disable the user code after a programmable amount of time. After this time elapses, Regulator can only be opened with the supervisor code.

To change the Regulator to Single Use Timeout ON or OFF, follow the steps on page 7 to enter programming mode.

There is a **10** second programming time limit between each step. If Regulator times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place Regulator into programming mode (see page 7).
 - a. To set Timeout ON, type **2XX** and then press **ENTER**.
(XX represents a time period from 04 - 12 in whole hours.)

OR

- b. To turn Timeout OFF, type **20** and then press **ENTER**.
3. If successful, the **green** indicator light will illuminate for 1 second.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX® **Regulator**

Programming Security Timeout ON / Security Timeout OFF

Warning: Security Timeout ON will disable the Regulator from use for 5 minutes when 5 invalid attempts to unlock Regulator occur. During this time, Regulator will not unlock with either the valid user or supervisor code.

To change the Regulator to Security Timeout ON or OFF, follow the steps on page 7 to enter programming mode.

There is a **10** second programming time limit between each step. If Regulator times out or error is made, programming will end and you will need to enter programming mode again.

1. Place Regulator into programming mode see page 7).
 - a. To turn **Security Timeout ON**, type **11** and then press **ENTER**.
 - OR
 - b. To turn **Security Timeout OFF**, type **10** and then press **ENTER**.
2. If successful, the **green** indicator light will illuminate for 1 second.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX *RegulatorR*®

Reset User Code to Factory Default 1234

(Does not apply to Single Use Mode)

To reset the **user code** to the factory default **1234** follow the steps on page 7 to enter programming mode.

There is a **10** second programming time limit between each step. If RegulatorR times out or error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatorR into programming mode (see page 7).
2. Type **8888** and then press the **ENTER** button.
3. If successful, the **green** indicator light will illuminate for 1 second.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX® ***Regulator***R®

Technician Mode – Programming (Manual locking Regulator only)

When Technician Mode is ON, the programmed technician code can be used to unlock a locked Single Use Mode Regulator without erasing the existing single use code.

There is a **10** second programming time limit between each step. If Regulator times out or error is made, programming will end and you will need to enter programming mode again.

1. Place Regulator into programming mode (see page 7).
2. To turn Technician Mode ON: type **31** and then press **ENTER**.
3. Type the desired 4 to 8 digit technician code and then press **ENTER**.
4. Retype technician code and then press **ENTER**
5. **REMEMBER THIS CODE**

OR

To turn Technician Mode OFF: type **30** and then press **ENTER**

- If successful, the **green** indicator light will illuminate for 1 second.
- Press **9** followed by **ENTER** to exit programming



CompX[®] *RegulatorR*[®]

Technician Mode - Operation

TO UNLOCK

1. Type the Technician code and press **ENTER**.
2. Turn the knob clockwise 180° to the unlocked position (all three LED lights will have a rotating blinking pattern).
3. To relock & retain the single use code that already exists; rotate the knob 180° counter clockwise.

OR

To remove the existing single use code and leave the RegulatorR unlocked: Type the Technician code and press **ENTER**.

Press **1** then press & hold **CLEAR** for 3 seconds.



CompX *RegulatorR*®

Add User Without Specifying Memory Slot

The **supervisor code** memory location is called **slot 01** and the first **user code** is called **slot 02**.

- Any additional user codes reside in memory slots 03-20.
- To add a user code without specifying a memory slot (03 -20), follow the steps on page 7 to enter programming mode.

User codes must be 4 to 8 digits in length and must be different from all existing codes (including slot 01 supervisor & slot 02 user codes).

There is a 10 second programming time limit between each step. If RegulatorR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatorR into programming mode (see page 7).
2. Press **410** and then press **ENTER**.
3. Type the new user code and press **ENTER**.
4. Retype the new user code and press **ENTER**.
5. If successful, the **yellow** indicator light will illuminate.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX® *RegulatorR*®

Add User to Specific Memory Slot (03 – 20)

The **supervisor code** memory location is called **slot 01** and the first **user code** is called **slot 02**.

- Any additional user codes reside in memory slots 03-20.
- To add a user code to a specific memory slot (03 -20), follow the steps on page 7 to enter programming mode.

User codes must be 4 to 8 digits in length and must be different from all existing codes (including slot 01 supervisor & slot 02 user codes).

There is a 10 second programming time limit between each step. If RegulatorR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatorR into programming mode (see page 7).
2. Press **411** and then press **ENTER**.
3. Type memory slot to be added followed by **ENTER** (for memory slots 03 - 09, you must type leading "0" – e.g. "04" for slot 4)
4. Retype memory slot to be added followed by **ENTER**
5. Type the new user code and press **ENTER**.
6. Retype the new user code and press **ENTER**.
7. If successful, the **yellow** indicator light will illuminate.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX *Regulator*R®

Delete User Without Specifying Memory Slot

The supervisor code memory location is called slot 01 and the first user code is called slot 02.

- The additional user codes reside in memory slots 03-20.
- To delete a user code without specifying a memory slot (03 -20), follow the steps on page 7 to enter programming mode.

There is a 10 second programming time limit between each step. If RegulatorR times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place RegulatorR into programming mode (see page 7).
2. Press **400** and then press **ENTER**.
3. Type the user code to be deleted and press **ENTER**.
4. Retype the user code to be deleted and press **ENTER**.
5. If successful, the **yellow** indicator light will illuminate.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX **Regulator**

Delete User From Specific Memory Slot (03 – 20)

The **supervisor code** memory location is called **slot 01** and the first **user code** is called **slot 02**.

- The additional user codes reside in memory slots 03-20.
- To delete a user code from a specific memory slot (03 -20), follow the steps on page 7 to enter programming mode.

There is a 10 second programming time limit between each step. If Regulator times out or an error is made, programming will end and you will need to enter programming mode again.

1. Place Regulator into programming mode (see page 7).
2. Press **401** and then press **ENTER**.
3. Type memory slot to be vacated followed by **ENTER** (for memory slots 03 - 09, you must type leading “0” – e.g. “04” for slot 4)
4. Retype memory slot to be vacated followed by **ENTER**.
5. If successful, the **yellow** indicator light will illuminate.

Continue programming or press **9** and then **ENTER** to exit programming.



CompX[®] *Regulator*

1"

NOTE: Print this page and measure the line above. It is **ONE INCH LONG**. If it measures less than or more than one inch, the template measurements also need to be scaled accordingly.

**FAILURE TO DO SO
COULD RESULT IN
MISDRILLED HOLES.**

