

STEP 2
ROTATE LOCK/GEARBOX
FULLY CLOCKWISE TO
OPEN POSITION.

AC-200
ACTUATOR

STEP 1
MOVE ALL LOCKBARS TO
OPEN POSITION
MIDDLE POSITION ON
AC-200
LOWER POSITION ON
AC-500

FLEXIBLE SHAFT

STEP 3
INSERT SHAFT INTO
ACTUATORS

AC-500
ACTUATOR

STEP 4
PRESS THE SQUARE SECTION
OF THE SHAFT INTO THE
GEARBOX

TO REMOVE THE SHAFT,
INSERT A SCREWDRIVER
BLADE AND PRY BACK
RETAINER

NOTE! SHAFT IS NOT REMOVABLE
WHEN THE LOCK IS IN THE
LOCKED POSITION.

FLEXIBLE SHAFT INSTALLATION

1-800-LOCKBAR/www.tlock.us
715 Center St., Grayslake, IL 60030
Copyright 2007 © CompX Security Products

