

## FORT MULTI - FUNCTION CAM LOCK


With this one lock, you can easily make an assembly that will meet your own particular requirements

### \*CAM STOPS



180 DEG.      90 DEG.


### SPLINE FILLERS

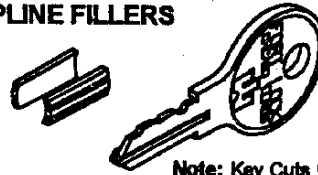

Note: Key Cuts Up

\*For either Right or Left Hand Application (by Reversing)


Diagram (as you face the Lock)  
with Flats as shown

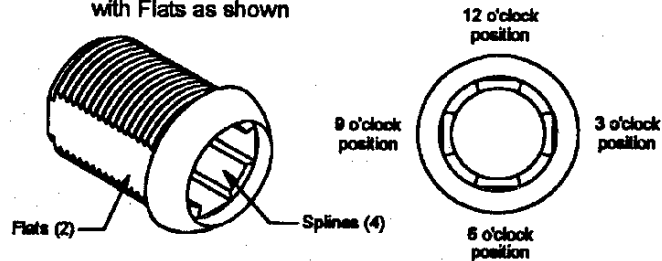

## FOR 23168 (1 3/4") ONLY !


Ball Detent for Snap Action

Place "O" Ring for  
Moisture Sealing

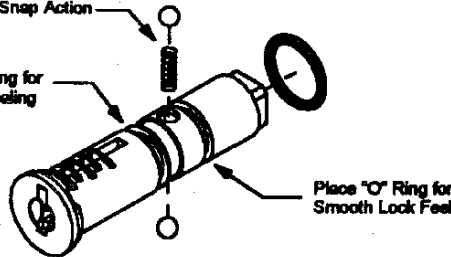

Select the function required and assemble the lock, as specified below

Function No.	Key Rotation from 12 o'clock Position To:	Key Removable at:	Use Cam Stop	Insert Spline Filler at:
1	3 o'clock	12 only	90 deg. right	3 o'clock
2	3 o'clock	12 and 3	90 deg. right	none
3	6 o'clock (right)	12 only	180 deg. right	3 and 6
4	6 o'clock (right)	12 and 6	180 deg. right	3 o'clock
5	9 o'clock	12 only	90 deg. left	9 o'clock
6	9 o'clock	12 and 9	90 deg. left	none
7	6 o'clock (left)	12 only	180 deg. left	3 and 6
8	6 o'clock (left)	12 and 6	180 deg. left	9 o'clock

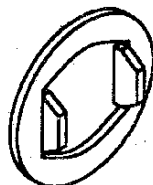

### ROUND HOLE INSTALLATION WITH THE WONDER WASHER IN WOOD OR METAL

After drilling 3/4" hole in either wood or metal position the Wonder Washer (tabs inward and vertical) firmly in to hole from either the front or rear surface, depending on thickness of material and preference. The Wonder Washer provides the double "D" shape needed to prevent the lock from rotating when installed and replaces with the other type of washers.

Now continue with the installation per instructions on the bag.