


Gilbarco Eclipse



Existing Assembly

1. Place cam adaptor **A** on lock spindle, orient for proper alignment
2. Insert lock spindle into shifter **B** and tap on force-fit stop cam **C** using **Tool**
3. Insert roll pin hook cam assembly into shifter **B**

TuBAR Assembly

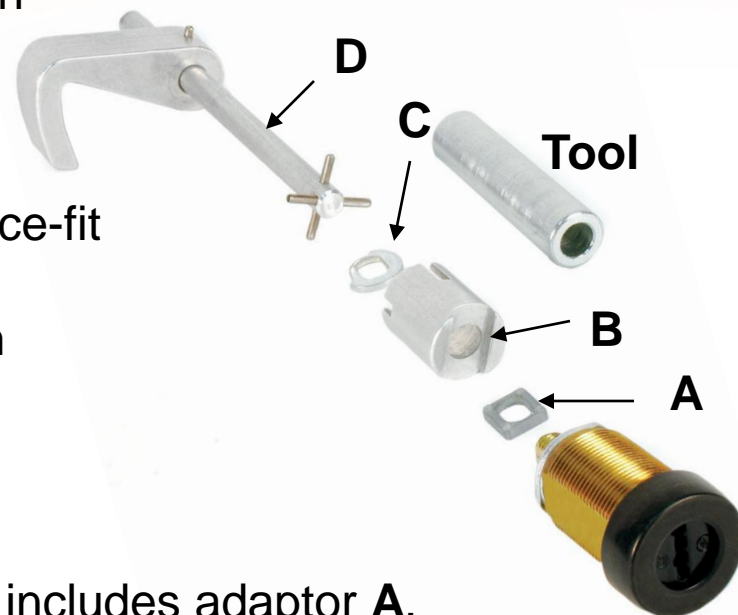

G-KIT-1 includes adaptor **A**, force-fit stop cam **C** and **Tool**