

TuBAR[®]/Turbine[®] Retrofit for Wayne Vista 4




GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4


Instructions

1. Locate and remove plug from housing (Fig. 1).
2. Insert Lock 'A' in hole using Cylinder Nut 'B' (Fig.2).
3. Install Cam 'C' using Nut & Lock Washer 'D' (Fig. 2).
4. Install Bracket 'E' into existing holes in dispenser frame securing with Nuts 'F' (Fig. 3).
5. Drill 7/32" hole in header (Fig. 4) using Bracket as a template.
6. Secure top of Bracket to header using Hex Bolt 'G' (Fig. 4).

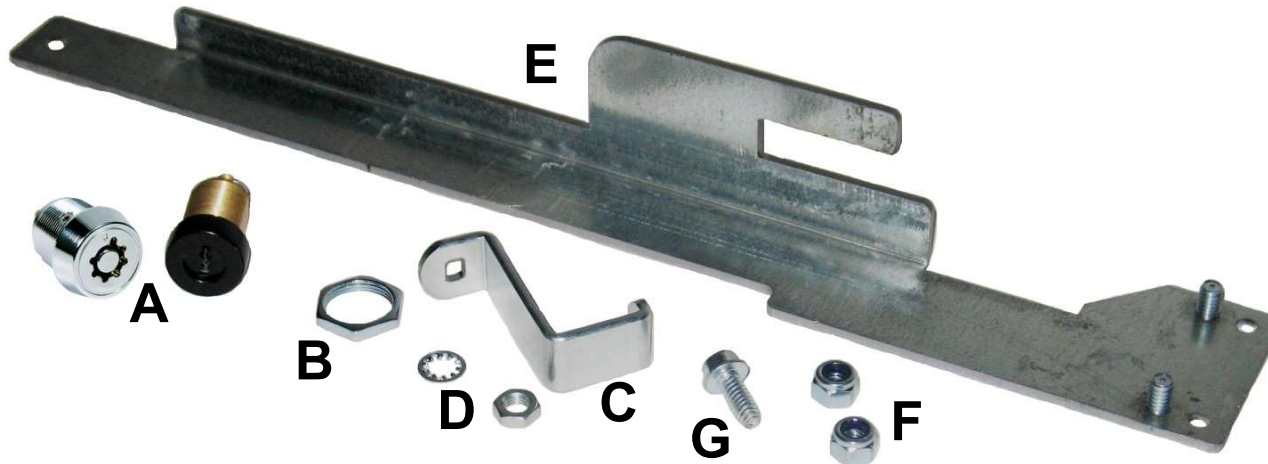

STOP GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4

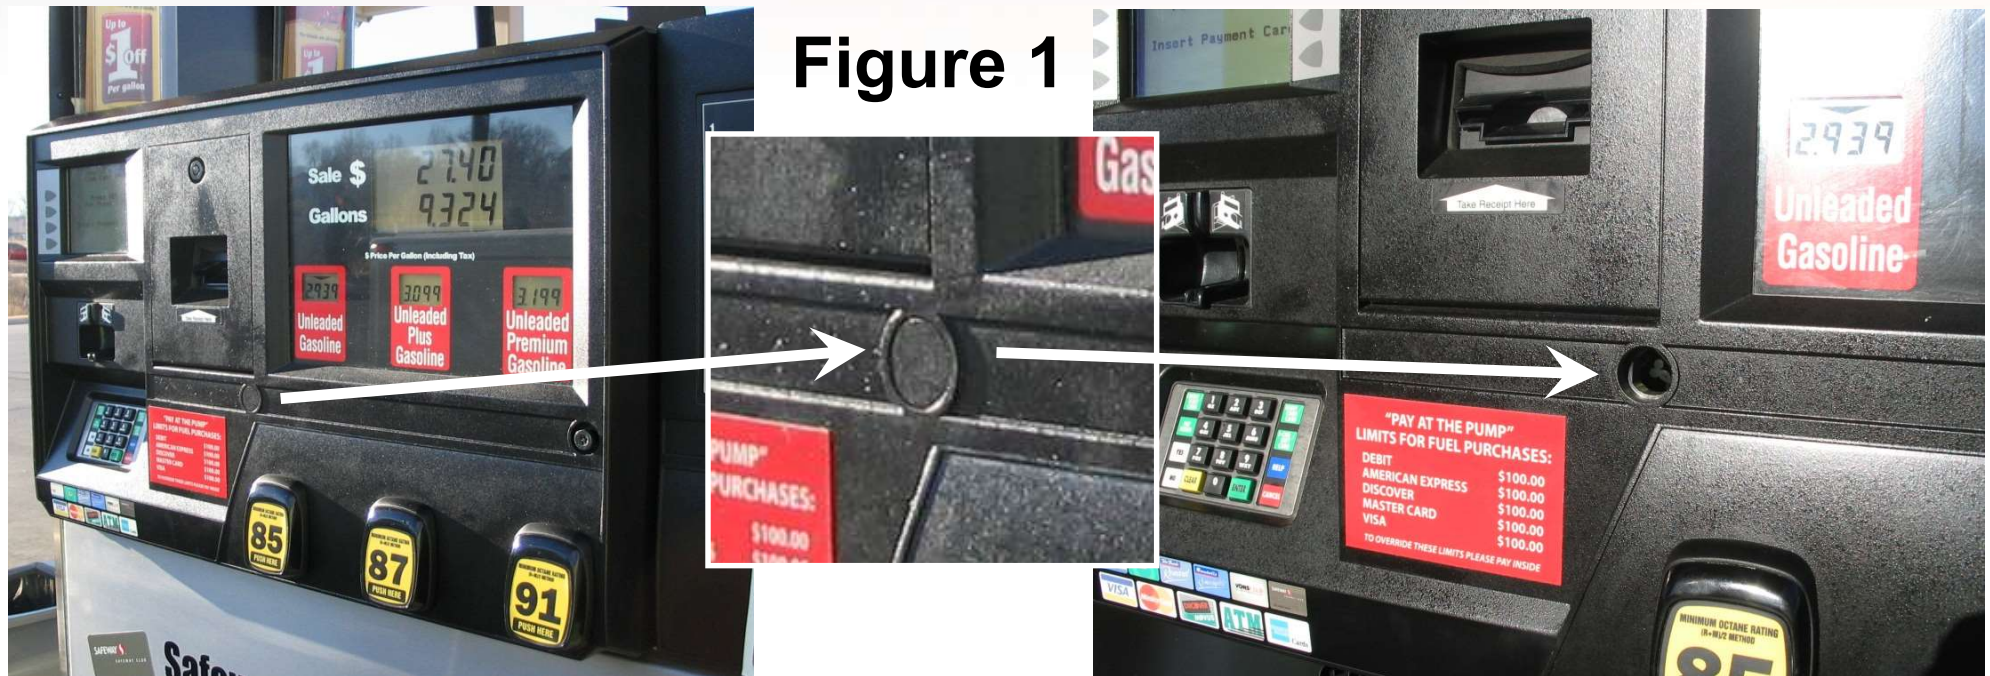


Locate and remove plastic plug from inside housing.

STOP

GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4


Figure 2

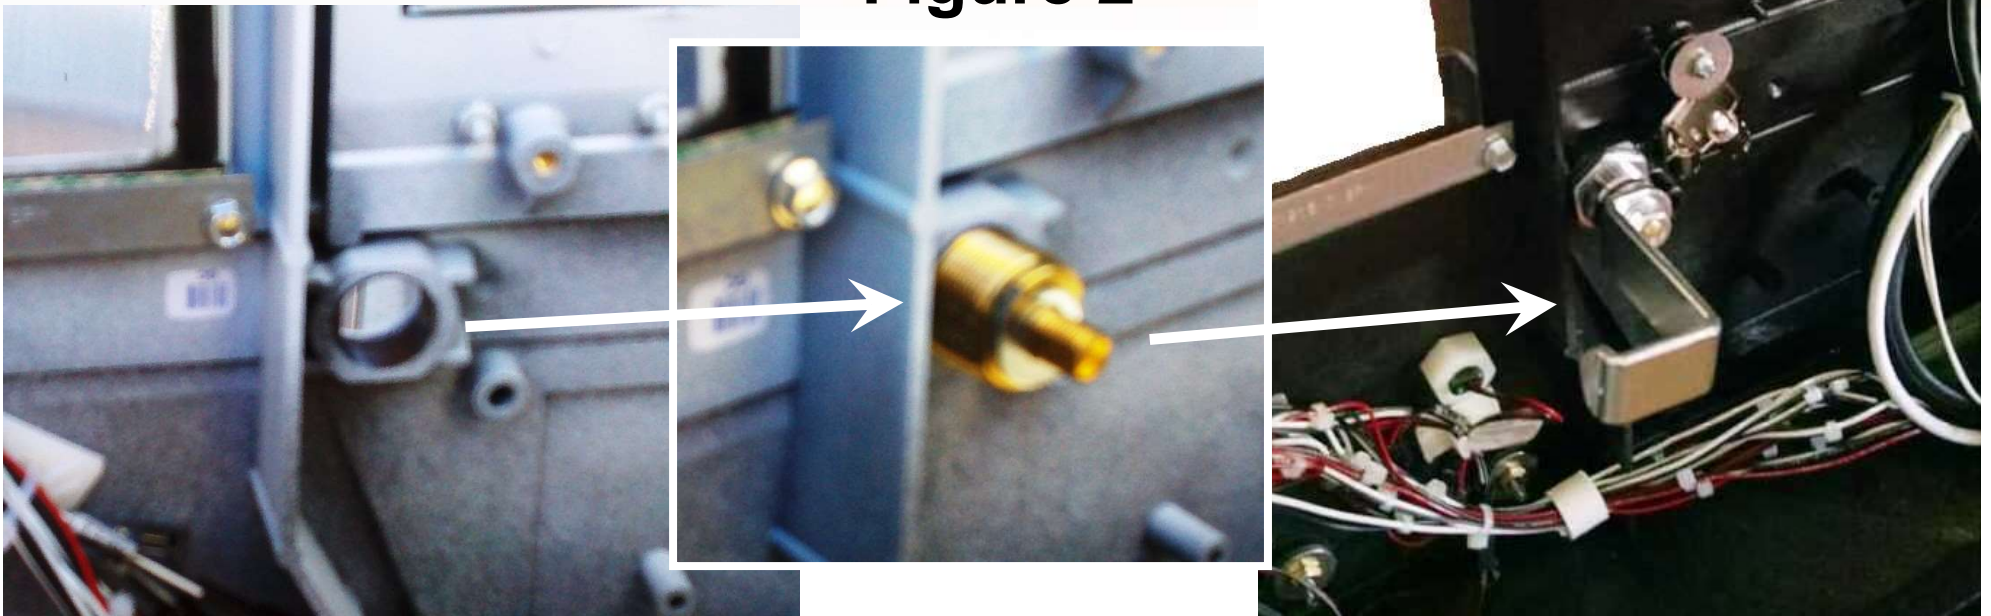

***Insert TuBAR Lock 'A' in hole, secure with Cylinder Nut 'B'.
Attach Cam 'C' and secure with Lock Washer & Nut 'D'.***

STOP GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4

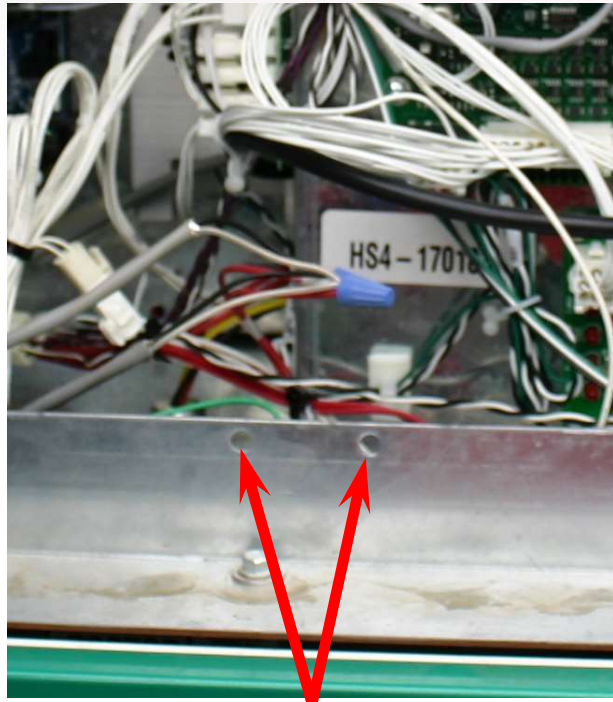

**Bracket
'E'**

Nuts 'F'

Figure 3



***Install Bracket 'E' into existing holes in dispenser frame.
Secure with Nuts 'F'.***

STOP GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4



Drill 7/32"

**Hex Bolt
'G'**



Figure 4

Drill 7/32" hole in header using Bracket as a template.
Install Hex Bolt 'G' to secure Bracket to header.

STOP

GAS THEFT & SKIMMING!

CAT Door Retrofit: Vista 4 Part # DWC-V4

Continue to use the compression security screw. Unlock locks before releasing pressure from security screw and tighten security screw before re-locking locks.



TuBAR or Turbine locks are not designed to be used as a compression latch.



GAS THEFT & SKIMMING!

Use CompX Part #:
SKD-CW
and existing cam

CompX
SECURITY PRODUCTS

